



Operating Instructions

Index	Page
Important Remark	3
1. Instrument Design	5
2. Accessoires ecom-CLV	6
3. Switch on Instrument	7
4. Choose a storage location (Option)	8
5. Gas Analysis	
5.1. Measurement Preparations	9
5.2. Gas Analysis	9
5.3. Draft Measurement	11
5.4. Soot...Oil trace	12
5.5. Record and print Measurement Result	12
6. Measurement Routines (Option)	
6.1. Atmospheric Boilers	13
6.2. Fan Burners	
6.2.1. Gas Fan Burners	17
6.2.2. Oil Fan Burners	20
6.3. Diagnosis gas	22
7. Adjustments	24
8. Control	27
9. Data processing (Option)	28
10. Maintenance Tips	29
11. Technical Data	32
12. FAQ	33

Important Remark



**The ecom-CLV meets the requirements
of the DIN EN 50379 Part 3.**



**The ecom-CL may not be used for continuous
emission control!**



**Following minimum times must be kept to get
correct measurement results:**
-1 Minute for fresh air calibration
-2 Minutes to get stable measurement results



**Following substances affect the function of the
instrument:**
-solvent containing gases as in:
- cleaning agents
- fat remove agents
- wax polish
- adhesives
-Formaldehyde




**Settings on fireplaces should just be made by
professionals who are experienced with the
function and adjustments of fireplaces!**





- 1. Charge the accumulator regularly (Charge not
used instrument min. once a month)!**
- 2. Never store the instrument with unloaded
accumulator!**

Fresh air opening

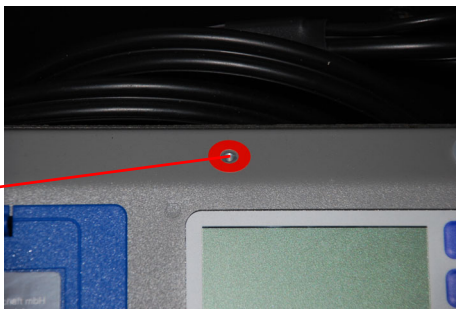

**Do not lock fresh air opening
for fresh air pump!**

1. Instrument Design

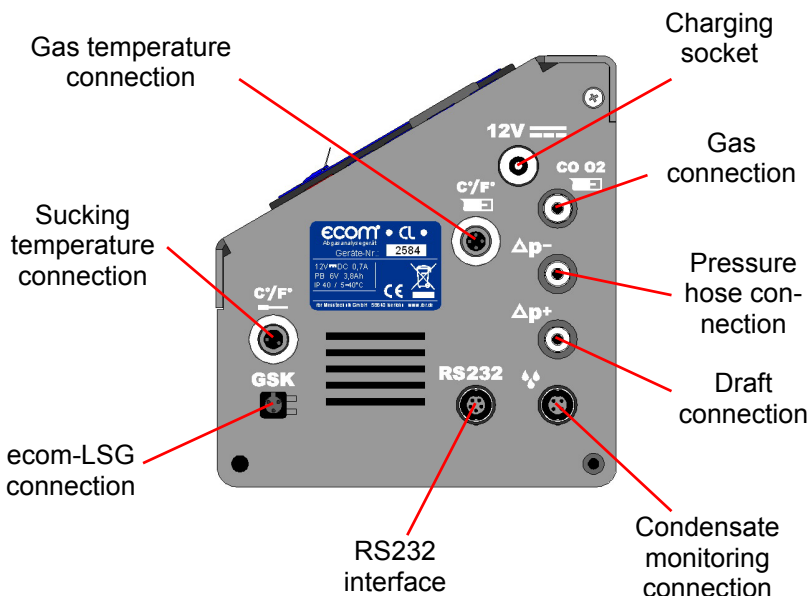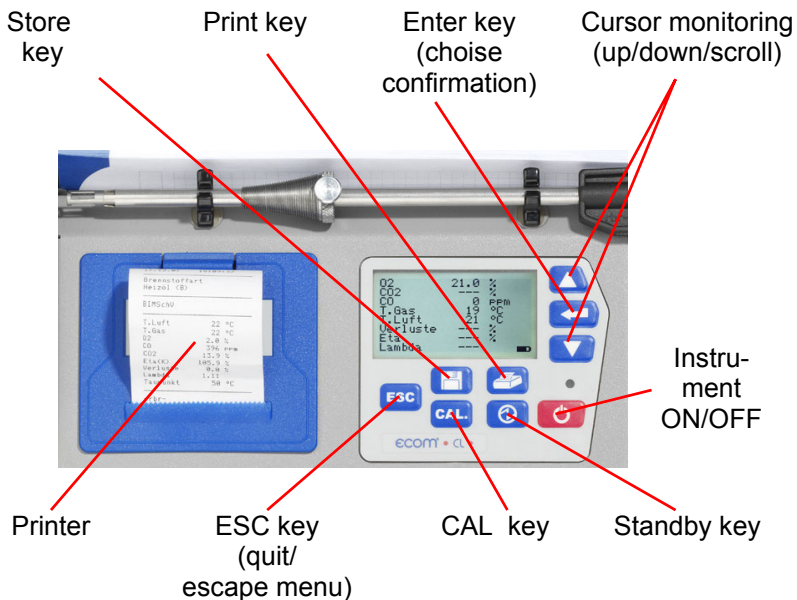

2. Accessoires ecom-CLV

Soot pump kit

Item no.:

50538



T-Room sensor stick

Item no.:

51446



3. Switch on Instrument

After switch on the instrument (press <I/O>) the main menu appears on the display. There will be displayed sub-menus with following functions (not visible sub-menus could be displayed by scrolling with arrow keys):

Abgasmessung
Atmosph. boiler
Burn. W. blower
Diagnosis gas
Data processing
Adjustments
Control

Comb. measurement : operate combustion measurement
 (Atmospheric boiler : operate routine for atmospheric boilers)*
 (Fan burner : operate routine for fan burners)*
 (Diagnostic gas : operate routine for gas fireplaces)*
 (Data processing : assign measurements / Data transfer)*
 Adjustments : change adjustments of instrument
 Control : check operating status of instrument (* = Option)

To perform measurements, select with the cursor keys the sub-menu **"Gas analysis"** and confirm with <Enter>. The instruments starts then a 1- minute calibration phase and the fuel types selection list is displayed. The following fuel types are available:

Fuel types acc. to 1st BImSchV

Fuel oil (B)

Natural gas (B)

City gas (B)

Coke oven gas (B)

Liquid gas (B)

Type of fuel
Fuel oil (B)
CO2max : 15.4
A1-fact. : 0.50
Select with ↑↓ !

Use the cursor keys to select the desired fuel type and confirm with <Enter>. The instrument will then enquire if you wish to use the data bank (only with option „Data processing“). If you want to assign the sampled data to a specific plant, so choose „YES“ with the cursor keys and confirm with <Enter>. („NO“ = measurement will be performed without assignment).

Data processing
NO
Are you sure?
Continue with : ↑↓ ↵

4. Input or select a data record (Option)

The **ecom-CLV** has 300 storage locations (option). In order to call up a data record which data are already stored in the instrument or to create a new file, choose a data record with the Cursor keys and confirm with **<Enter>**

Memory number 0
Data record is empty !
Confirm with : ↑ ↓ ↵

If you are choosing an empty data record, a designation (max. 16 indications) can be assigned. Proceed as follows:

- choose a keyboard with the **<CAL.>** key (5 keyboards are available)
- select a character with the keys **<Store>** (left), **<Print>** (right) and the Cursor keys **<up/down>** (selected character is black deposits)
- take over the character with **<Enter>**
- repeat procedure, until desired designation is complete
- if you want to correct a character, proceed as follows:
 - interrupt the selection with **<Standby>**
 - select the character with the keys **<Store>** (left), **<Print>** (right) and the Cursor keys **<up/down>**
 - activate the selection with **<Standby>** and select the correct character

-turn to Combustion measurement with 2 x **<ESC>** , „**Comb. measurement.**“ and **<Enter>**.

If you are choosing a data record with data, you can call up the data with **<Enter>** / **<Store>** / **<Enter>**. Now you can view the data with the Cursor keys **<up/down>**.

5. Combustion Measurement

5.1 Prepare Combustion Measurement



Prepare instrument for measurement operation by making all connections (T-Room sensor and T-Gas, GAS and DRA of the 3-chamber hose). Make sure that:

- the water trap contains no humidity
- the fine dust filter and the safety filter are not soiled darker than no. 3 on the soot scale

5.2. Gas Analysis



Just position the probe in the exhaust pipe once the calibration phase is over!



To obtain accurate measurement values it's important to re-calibrate the instrument after each measurement (at the latest after one hour)!

Once the calibration cycle is over, the instrument enters the measurement mode. The measurement values could be displayed on 4 screen pages (3 x gas analysis; 1 x draught measurement; 1 x soot measurement – change with cursor keys):

O2	4.0 %	O2	4.0 %	O2	4.0	%
CO2	12.5 %	CO2	12.5 %	CO2	12.5	%
T.Air	20 °C	CO	30 ppm	CO	30	ppm
T.Gas	212 °C	Lambda	1.23	Lambda	1.23	
				T.Gas	166	°C
				T.Air	20	°C
				Losses	7.0	%
				Eta	93.0	%

The position of the measured and calculated values (gas analysis) can be chosen freely on the display. To change the position or the composition, please proceed as follows:


- with **<Enter>** / **<Display values>** / **<Enter>** activate the first line on the display
- choose with cursor key the measured or calculated value
- with **<Enter>** activate the next line on the display and so on
- with **<ESC>** or **<Enter>** in the last line you leave this process.

The values for CO₂, Efficiency, Losses, Lambda and the Dew Point are calculated values. They just can be calculated when realistic figures for the basic values like O₂ and the temperature are available. It must be assured that:

$$\text{O}_2 < 20,5 \% \text{ and } \text{T.Gas} - \text{T.Air} > + 5^\circ\text{C}$$

The dew point can just be calculated correctly if in the menu “Adjustments / Air pressure” the current barometric air pressure has been entered. If the combustion gas temperature falls below the dew point /between 25 and 65°C) the efficiency will be calculated with condensation gain. In this case a (C) is displayed behind the efficiency . Correct measurement values are displayed after a delay of 1 to 1,5 minutes necessary for the gas transport to the sensors and to establish a stable electrochemical reaction in the sensors. For storage and printing wait for the values to become stable. If the gas value still fluctuates for more than 2 ppm, the reason could be in an unstable draft condition in the gas channel.

Once the measurement values are stable and the results can be printed, press **<store>** (Disc symbol) to transfer the values to the temporary memory. Data will be stored here for later printout (the values of the temporary memory could be checked by pressing **<Enter>** / **<store>** / **<Enter>**. While checking the values the gas pump will be switched off in order to spare the sensors. (back with **<ESC>**).

O2	4.0	%	
CO2	12.5	%	
CO	30	ppm	
Lambda	1.23		
T.Gas	166	°C	
T.Air	20	°C	
Losses	7.0	%	
Eta	93.0	%	

**Measurement stored
in temporary memory**

The internal program protects the CO-sensor for overload. In case the limit of 2000 ppm is exceeded the gas pump will be switched off. Remove the probe off the combustion gas or pull off the hose from the connection measurement gas. Then press the key **<CAL>**. The instrument will be flashed with fresh air until a CO-value of under 50 ppm is reached. Now the instrument is ready for operation again (connect the hose for measurement gas or put the probe in the combustion gas).

5.3. Draft Measurement

The gas measurement mode already provides a trend indication of the draught conditions in the combustion gas channel. As the pressure sensor is very sensitive and tend to drift, the value will not be recorded by pressing **<store>**. It is therefore recommended to re-calibrate this sensor prior to the actual measurement and results printing.

The current value will be displayed as well as the remark to reset the zero point of the sensor. Therefore disconnect the draught hose from the instrument and press the key **<CAL>**. By this the sensor is calibrated.

Draught	
Draft	-0.12 hPa
Val.:	- . - - hPa
Set zero point CAL.	

Connect the draught hose again with the instrument. The exact measurement value is displayed now and can be stored by pressing **<store>** and added to the other values already in the temporary memory. The stored value will appear on the display.

Draught	
Draft	-0.12 hPa
Val.:	-0.12 hPa
Set zero point CAL.	

5.4. Soot...Oil trace

Under „**Soot...Oil trace**“ the measurement results for boiler temperature, soot number and oil derivative can be entered. Select the corresponding line in the display and activate the entry by **<Enter>**. The input for boiler temperature and soot number (3 measurements) can be done as follows:

- select with the keys **<store>** (left) and **<Print>** (right) the position which should be changed (corresponding field is blinking)
- enter the designated number with the cursor keys **<up/down>**

By pressing the key **<Enter>** the entry will be transferred to the data record of the measurement. The result of the oil derivative checking will be documented as follows:

- set cursor to line “**Ölderivat**”
- select the result with the key **<Enter>**
 (“No”, “Yes” or “- - -”)

Soot...Oil trace	
T.Boiler	--- °C
1.Soot meas.	---
2.Soot meas.	---
3.Soot meas.	---
Oil trace	---
Input: ↵	

When all necessary entries have been made the entry can be closed by pressing the key **<ESC>**. The measurement is now completed.

5.5. Record and print Measurement



After the gas analysis, please transfer the recorded data (intermediate memory) into the internal instrument memory otherwise the values will get lost by instrument switch-off!

After scrolling back to the gas measurement with the cursor keys **<up/down>** the measurement can be transferred to the internal memory with **<Enter>** / **<Store to memory>** / **<Enter>** (after successful storage an “**M**” will appear right down in the display). Finally a print-out of the results can be made (key **<Print>**).

Display/Memory
Memory
Store to memory
Display values
Continue with: ↑↓ ↵

6. Measurement Routines (Option)

The **ecom-CLV** provides measurement routines which makes standard checking on atmospheric boilers and fan burners easier.

6.1. Atmospheric Boilers

Select from the main menu the sub menu „**Atmosph. Boilers**” and press **<Enter>**. The table of fuel types will be displayed. Following fuel types can be selected:

Natural gas (B)
Town gas (B)
Coke gas (B)
Liquid gas (B)

Type of fuel
Natural gas (B)
CO2max : 11.8
A1-fact. : 0.37
Select with ↑↓ !

Select with the arrow keys the corresponding fuel type and confirm by pressing **<Enter>**. The measurement “**Draft / Pressure**” is displayed. To operate the measurement (0 – 70 hPa) the draught hose must be connected. In case of deviations of the zero point it could be reset by pressing **<CAL>**.

Connect the draught hose to the instrument. After the pressure has stabilised it can be stored by pressing **<store>** for later printout. By pressing the key **<store>** again the value will be deleted. Using the cursor **<down>** it could be get to the next measurement.

Operate the following pressure measurement as described above. Not needed measurements can be skipped by using the cursor key **<down>** (these will not be printed).

Atmosph. boiler
Connection pressure
24.7 hPa
Val.: 24.7 hPa
Set zero point CAL.

Atmosph. boiler
Flow pressure
21.1 hPa
Val.: 21.1 hPa
Set zero point CAL.

Atmosph. boiler
Nozzle pres pa. load
4.4 hPa
Val.: 4.4 hPa
Set zero point CAL.

Atmosph. boiler
Nozzle pres fu. load
13.1 hPa
Val.: 13.1 hPa
Set zero point CAL.

Another feature of the **ecom-CLV** is to determine the thermal capacity brought to the boiler. For this the gas meter has to be observed. By pressing **<Enter>** a stopwatch can be started and stopped. The amount of gas consumed in the meantime is necessary for calculation and is entered as follows:

1. Select the position which should be changed with the keys **<store>** (left) and **<Print>** (right) (corresponding field flashes)
2. Set the value by using the cursers **<up / down>**.

After setting and confirmation by pressing **<Enter>** the result of the calculation will be displayed and stored. Calculation can be repeated if needed. For calculation following heating values are taken:

Natural gas (B) = 9,53 kWh/m³
 Town gas (B) = 5,00 kWh/m³
 Coke gas (B) = 4,83 kWh/m³
 Liquid gas (B) = 25,90 kWh/m³

By using the curser **<down>** it can be scrolled to the next measurement „**Pressure free**“. Here is the option for another pressure measurement.

At the next point of the routine (Curser **<down>**) is the option of determination of a temperature difference (W. Temp. warm – W. Temp. cold).

Atmosph. boiler
Gas flow rate - - . - m ³ /h
Perfo. - - . - kW
Start : ↵

Atmosph. boiler
Gas flow rate Time: 1 sec
Continue with : ↵

Atmosph. boiler
Gas flow rate 0.100 m ³
ESC ↑↓ ↵ ← →

Atmosph. boiler
Gas flow rate 4.9 m ³ /h
Perfo. 46.7 kW
Start : ↵

Atmosph. boiler
Press. free 14.3 hPa
Val.: 14.3 hPa
Set zero point CAL.

Atmosph. boiler
W. Temp. cold 22 °C
Val.: 22 °C
Continue with : ↑↓

For determination of the two temperatures the T-Room probe is used (waterproof version).

Storage of the measurement values (after getting stable) is done by the key **<store>**.

By using the curser **<down>** it can be scrolled to the next measurement **“Temp free”**. Here is the option for another temperature measurement.

After storing the temperatures the CO-measurements are next. By pressing the curser **<down>** a 1-minute calibration cycle starts for flashing the sensors with fresh air. During calibration cycle the probe must not be positioned in the combustion tube. After calibration cycle the CO-content of the surrounding air can be determined. Use the probe to check the area around the boiler. Beside the stored value (press key **<store>**) the instrument stores the maximum CO-value of the measurement.

Next point of the routine (curser key **<down>**) is the CO-value in the combustion tube of the boiler which is determined. For measurement the probe must be positioned in the combustion tube. Apart from the stored value the maximum CO-value of the measurement is stored.

Atmosph. boiler
W. Temp. warm 48 °C
Val.: 48 °C
Continue with : ↑↓

Atmosph. boiler
Difference 26 °C
Continue with : ↑↓

Atmosph. boiler
Temp. free 34 °C
Val.: 34 °C
Continue with : ↑↓

Atmosph. boiler
CO ambient 6 ppm
Val.: 6 ppm
CO max: 9 ppm

Atmosph. boiler
CO flue gas 21 ppm
Val.: 21 ppm
CO max: 26 ppm

After storing the CO-values the next point are the draught measurements (curser key **<down>**). For exact measuring it's recommended to reset the sensor to zero. Remove the draught hose off the instrument and press **<CAL>**. The zero point of the sensor is set now. After the draught has stabilised it can be stored for later printout by pressing the key **<store>**:

Atmosph. boiler	
Draft	-0.04 hPa
Val.:	-0.04 hPa
Set zero point CAL.	

At the end of the measurement routine (curser down) it is checked whether a gas leakage at the unit could be determined. Confirmation could be done by using the key **<Enter>** (yes / no).

Atmosph. boiler	
Gas leakage	
No	
Change: ↵	

The printout of all results of the measurement routine could be done by pressing **<Print>**.

6.2. Fan burners

Select from the main menu the sub menu “**Fan burner**” and press **<Enter>**. The table of fuel types will be displayed. Following fuel types can be selected:

Natural gas (B)
Town gas (B)
Coke gas (B)
Liquid gas (B)

Type of fuel
Natural gas (B)
CO ₂ max : 11.8 A1-fact. : 0.37
Select with ↑↓ !

Select with the arrow keys the corresponding fuel type and confirm by pressing **<Enter>**.

6.2.1. Gas fan burners

Selecting a gas fuel type the routine starts with the measurement “**Connecting pressure**”. To operate the measurement (0 – 70 hPa) the draught hose must be connected. In case of deviations of the zero point it could be reset by pressing **<CAL>**.

Connect the draught hose with the instrument. After the pressure has stabilised it can be stored by pressing **<store>** for later printout. By pressing the key **<store>** again the value will be deleted. Using the cursor **<down>** it could be get to the next measurement.

Operate the following pressure measurement as described above. Not needed measurements can be skipped by using the cursor key **<down>** (these will not be printed).

Burn. w. blower
Connection pressure 22.1 hPa Val.: 22.1 hPa
Set zero point CAL.

Burn. w. blower
Flow pressure 18.7 hPa Val.: 18.7 hPa
Set zero point CAL.

Burn. w. blower
Nozzle pres pa. load 6.4 hPa Val.: 6.4 hPa
Set zero point CAL.

Burn. w. blower
Nozzle pres fu. load 13.0 hPa Val.: 13.0 hPa
Set zero point CAL.

Another feature of the **ecom-CLV** is to determine the thermal capacity brought to the boiler. For this the gas meter has to be observed. By pressing **<Enter>** a stopwatch can be started and stopped. The amount of gas consumed in the meantime is necessary for calculation and is entered as follows:

1. Select the position which should be changed with the keys **<store>** (left) and **<Print>** (right) (corresponding field flashes)
2. Set the value by using the cursers **<up / down>**.

After setting and confirmation by pressing **<Enter>** the result of the calculation will be displayed and stored. Calculation can be repeated if needed. For calculation following heating values are taken:

Natural gas (B) = 9,53 kWh/m³
 Town gas (B) = 5,00 kWh/m³
 Coke gas (B) = 4,83 kWh/m³
 Liquid gas (B) = 25,90 kWh/m³

By using the curser **<down>** it can be scrolled to the next measurement „**Pressure free**“. Here is the option for another pressure measurement.

At the next point of the routine (Curser **<down>**) is the option of determination a temperature difference (W. Temp. warm – W. Temp. cold). For determination of the two temperatures, the T-Room probe is used (waterproof version).

Burn. w. blower
Gas flow rate
- - - m ³ /h
Perfo. - - - kW
Start : ↓

Burn. w. blower
Gas flow rate
Time: 1 sec
Continue with : ↓

Burn. w. blower
Gas flow rate
0.100 m ³
ESC ↑↓ ↓ ← →

Burn. w. blower
Gas flow rate
4.2 m ³ /h
Perfo. 40.0 kW
Start : ↓

Burn. w. blower
Press. free
4.5 hPa
Val.: 4.5 hPa
Set zero point CAL.

Burn. w. blower
W. Temp. kalt
21 °C
Val.: 21 °C
Continue with : ↑↓

Burn. w. blower
W. Temp. warm
54 °C
Val.: 54 °C
Continue with : ↑↓

Storage of the measurement values (after getting stable) is done with the key **<store>**.

By using the cursor **<down>** it can be scrolled to the next measurement **"Temp free"**. Here is the option for another temperature measurement.

After storing the temperatures the measurement of the combustion gases is next. By pressing the cursor **<down>** a 1-minute calibration cycle starts for flashing the sensors with fresh air. During calibration cycle the probe must not be positioned in the combustion tube. After calibration cycle, the combustion measurement at part capacity can be started. For measurement the probe must be positioned in the combustion tube. Measurement will be stated by pressing **<Enter>**. After 90 seconds the measured values will be automatically stored for later printout.

Next point of the routine is the combustion measurement at full capacity by pressing **<Enter>**. Also here the values will be measured after 90 seconds.

After finishing the combustion measurement the CO-value of the surrounding air can be determined. Use the probe to check the area around the boiler. Besides the stored value (press **<store>**) the instrument stores the maximum CO-value of the measurement.

Burn. w. blower
Difference 33 °C
Continue with : ↑↓

Burn. w. blower
Temp. free 37 °C
Val.: 37 °C
Continue with : ↑↓

CO2	9.6 %
O2	4.0 %
CO	30 ppm
Eta	93.0 %
T.Gas	166 °C
T.Luft	20 °C
Parti. load	Start : ↓

CO2	9.6 %
O2	4.0 %
CO	30 ppm
Eta	93.0 %
T.Gas	166 °C
T.Luft	20 °C
Full load	Start : ↓

Burn. w. blower
CO ambient 5 ppm
Val.: 5 ppm
CO max: 9 ppm

At the end of the measurement routine (curser **<down>**) it is checked whether a gas leakage at the unit could be determined. Confirmation could be done by using the key **<Enter>** (yes / no).

Burn. w. blower
Gas leakage No
Change : ↵

The printout of all results of the measurement routine could be done by pressing **<Print>**.

6.2.2. Oil fan burner

Using Heating oil (B) as fuel type the routine starts by determining the oil flow and the thermal capacity brought to the boiler. Open the menu **<Oil pressure>** by pressing **<Enter>**. Enter the measured oil pressure as follows:

1. Use the keys **<store>** (left) and **<Print>** (right) to come to the positions which should be changed (corresponding field is flashing).

2. Set the number by using the curser keys.

After setting and pressing **<Enter>** the sub-menu nozzle size will be opened. Enter the used nozzle size like described above.

After setting and pressing **<Enter>** the result of the calculation will be displayed. The calculation can be repeated if needed. For calculation following heating values are taken:

Heating oil (B) = 11,86 kWh/m³

Burn. w. blower
Oil rate - - - kg/h
Perfo. - - - kW
Input : ↵

Burn. w. blower
Oil press. 12.00 bar
ESC ↕ ↵ ← →

Burn. w. blower
Nozz. size 0.60 Gal/h
ESC ↕ ↵ ← →

Burn. w. blower
Oil rate 2.5 kg/h
Perfo. 29.7 kW
Input : ↵

At the next point of the routine (curser **<down>**) there is the option of determination of a temperature difference (W. Temp. warm – W. Temp. cold). For determination of the two temperatures the T-Room probe is used (waterproof version).

Storage of the measurement values (after getting stable) is done by the key **<store>**.

By using the curser **<down>** it can be scrolled to the next measurement **“Temp free”**. Here is the option for another temperature measurement.

After storing the temperatures, the measurement of the combustion gases are next. By pressing the curser **<down>** a 1-minute calibration cycle starts for flashing the sensors with fresh air. During calibration cycle the probe must not be positioned in the combustion tube. After calibration cycle, the combustion measurement at part capacity can be started. For measurement the probe must be positioned in the combustion tube. Measurement will be started by pressing **<Enter>**. After 90 seconds the measured values will be automatically stored for later printout.

Next point of the routine is the combustion measurement at full capacity by pressing **<Enter>**. Also here the values will be measured after 90 seconds.

The printout of all results of the measurement routine could be done by pressing **<Print>**.

Burn. w. blower
W. Temp. cold
21 °C
Val.: 21 °C
Continue with : ↑↓

Burn. w. blower
W. Temp. warm
54 °C
Val.: 54 °C
Continue with : ↑↓

Burn. w. blower
Difference
33 °C
Continue with : ↑↓

Burn. w. blower
Temp. free
37 °C
Val.: 37 °C
Continue with : ↑↓

CO2	12.5 %
O2	4.0 %
CO	30 ppm
Eta	93.0 %
T.Gas	166 °C
T.Air	20 °C
Parti. load	Start : ↓

CO2	12.5 %
O2	4.0 %
CO	30 ppm
Eta	93.0 %
T.Gas	166 °C
T.Air	20 °C
Full load	Start : ↓

6.3. Diagnosis gas

Select from the main menu the sub menu “**Diagnosis Gas**” and press **<Enter>**. The table of fuel types will be displayed. Following fuel types can be selected:

Natural gas (B)
Town gas (B)
Coke gas (B)
Liquid gas (B)

Type of fuel
Natural gas (B)
CO ₂ max : 11.8
A1-fact. : 0.37
Select with ↑↓ !

Select with the arrow keys the corresponding fuel type and confirm by pressing **<Enter>**.

First the thermal capacity brought to the boiler can be determined with the **ecom-CLV**. For this the gas meter has to be observed. By pressing **<Enter>** a stopwatch can be started and stopped. The amount of gas consumed in the meantime is necessary for calculation and is entered as follows:

1. Select the position which should be changed with the keys **<store>** (left) and **<Print>** (right) (corresponding field flashes)

Diagnosis gas
Gas flow rate
- - . - m ³ /h
Perfo. - - . - kW
Start : ↵

2. Set the value by using the cursers **<up / down>**.

Diagnosis gas
Gas flow rate
Time: 1 sec
Continue with : ↵

After setting and confirmation by pressing **<Enter>** the result of the calculation will be displayed and stored. Calculation can be repeated if needed. For calculation following heating values are taken:

Diagnosis gas
Gas flow rate
0.100 m ³
ESC ↑↓ ↵ ← →

Natural gas (B) = 9,53 kWh/m³
Town gas (B) = 5,00 kWh/m³
Coke gas (B) = 4,83 kWh/m³
Liquid gas (B) = 25,90 kWh/m³

Diagnosis gas
Gasdurchsatz
2.0 m ³ /h
Perfo. 19.1 kW
Start : ↵

After determination of the burning capacity the next point of the routine is the CO-measurement. By pressing the curser **<down>** a 1-minute calibration cycle starts for flashing the sensors with fresh air. During calibration cycle the probe must not be positioned in the combustion tube. After calibration cycle the CO-content of the surrounding air can be determined. Use the probe to check the area around the boiler. Beside the stored value (press key **<store>**) the instrument stores maximum CO-value of the measurement.

Diagnosis gas
CO ambient
0 ppm
Val.: - - - ppm
CO max: 0 ppm

Next point of the routine (curser key **<down>**) the CO-value in the combustion tube of the boiler is determined. For measurement the probe must be positioned in the combustion tube. Apart from the stored value the maximum CO-value of the measurement is stored.

Diagnosis gas
CO flue gas
0 ppm
Val.: - - - ppm
CO max: 26 ppm

After storing the CO-values the next point are the draught measurements (curser key **<down>**). For exact measuring it's recommended to reset the sensor to zero. Remove the draught hose off the instrument and press **<CAL>**. The zero point of the sensor is set now. After the draught has stabilised it can be stored for later printout by pressing the key **<store>**.

Diagnosis gas
Draft
-0.12 hPa
Val.: - . - - hPa
Set zero point CAL.

At the end of the measurement routine (curser down) it is checked whether a gas leakage at the unit could be determined. Confirmation could be done by using the key **<Enter>** (yes / no).

Diagnosis gas
Gas leakage
No
Change : ↵

The printout of all results of the measurement routine could be done by pressing **<Print>**.

7. Adjustments

In addition to the already described features of the **ecom-CLV**, various settings could be made at the instrument. Select from the main menu the sub-menu **<Adjustment>** and confirm with **<Enter>**. A list of the possible settings is displayed and can be changed according to usage. Scroll the cursor to the corresponding line and press **<Enter>**:

Set clock

- (setting can be made by pressing **<Enter>**):
- scroll with cursors (**up / down**) to the value which should be changed
 - activate the setting by pressing **<Enter>**
 - set the time by using curser keys **<up / down>**
 - confirm the setting by pressing **<Enter>**
 - after finishing leave the menu with **<ESC>**

Paper insert (activate with **<Enter>**)

- paper feed line by line

Display contrast (activate with **<Enter>**)

- set display contrast with curser (**up / down**)
- reset with **<CAL>**

Printer contrast (activate with **<Enter>**)

- set printer contrast with cursers (**up / down**)
- reset with **<CAL>**

Set clock
Paper insert
Display contrast
Printer cont.
Type of fuel
Unit
O2 refer.
Air press.
Keyboard beep
Baud rate
Online data
Eta(C)
Printout

Type of fuel (select after pressing **<Enter>**)

-change the fuel type

Unit (change with cursers (**up / down**))

-calculation of gas concentration in:

-ppm = volume concentration (parts per million)

-mg/m³ = mass concentration unit

-mg/kWh 0,0 % = Mass concentration per capacity unit calculated with reference O₂

-ppm 0,0 % = volume concentration (parts per million) calculated with reference O₂

-mg/m³ 0,0 % = mass concentration per capacity unit calculated with reference O₂

-calculated with reference O₂ – formula for the calculation:

$$E_{\text{ref}} = E_{\text{meas}} * \frac{21 - O_{2\text{ref}}}{21 - O_{2\text{meas}}}$$

O₂ Reference (set by pressing **<Enter>**):

-setting of reference oxygen value O_{2ref}

-reset by pressing **<CAL>**

Air pressure (set by pressing **<Enter>**):

-Input of barometric pressure for calculation of dew point

-Reset by pressing **<CAL>**

Keyboard beep (set with cursers **<up / down>**)

-set signal when hitting the keys

-reset by pressing **<CAL>**

Baud rate (adjustment via **cursor keys**):

- Adjustment of transfer speed by data transfer via RS 232 (1200 -19200 Baud) or activation of Bluetooth (Option)

Online data (adjustment via **cursor keys**):

- Adjustment if online data should be sent. Online data can be transferred to software „DASNT“ with RS232 cable (**1200 Baud / DAS (rbr)**). The software „DASNT“ is available at www.rbr.de.

Eta(C) (adjustment via **cursor keys**):

- Efficiency calculation with or without condensation gain

Printout (set by pressing **<Enter>**)

-create a protocol feet (8 x 24 digits)

-put in the text for line one as follows:

1. activate symbol selection with **<Standby>**
2. select keyboard with **<CAL.>** (5 keyboards are available)
3. choose a symbol with **<store>** (left), **<Print>** (right) and cursers **<up / down>**
4. take the symbol with **<Enter>**
5. repeat (2. - 4.) until line 1 is finished
6. deactivate choosing symbols with **<Standby>** and change with curser **<up>** to line 2.
7. after finishing the input for all lines leave the menu with **<ESC>**

8. Control

The electrochemical sensors used for gas analysis are submitted to a wearing process and age. Along the operation period, they alter their output values depending on the gas concentration, flow duration and soiling degree of the measured gases. The programme controls the sensors and corrects drifts. If drifts and the correlated measurements errors increase, an error message is displayed. In this case the corresponding sensors must be changed by one of our authorised service centres. The actual status of the sensors is displayed in the control menu. Additionally on two more pages will be displayed (change the display pages by using the cursers):

-the battery voltage (charging status)
displayed in all menus as symbol:

Battery full Battery ½ full Battery empty



- the phone number of next service centre
- the serial number
- the software version
- the operation hours
- the date of last service
- the number of CO switch offs
- the number of error occurred

O2	1034 mV
CO	-10 mV
Batt	6.42 Volt
Tel.No. 02371/945-5	
Ins.No. CL-0009 V1.1	
Further info with ↑↓	

Oper. hours	7.39
Service date	23.06.04
CO-Überläufe	0
Error counter	00
Tel.No. 02371/945-5	
Ins.No. CL-0009 V1.1	
Further info with ↑↓	

9. Data processing (Option)

The menu „**Data processing**“ allows the selection of the following functions:

Data processing
Select
Look at
Load data
Send data
Format memory
Continue with : ↑↓↵

Select:

This sub-menu enables to search for or create a data record for the allocation of measurement values (see chapter 4.).

Look at:

The recorded values of the selected data record can be viewed (see chapter 4.).

Load data:

Possibility of data import e.g. from rbr software (available at „www.rbr.de“ - check the transfer options of your software).

Proceed as follows:

1. Connect instrument and PC with a current RS232 cable.
2. Select „**Load data**“ and confirm with **<OK>**.
3. Answer following question with **Yes** (select with cursor keys).
4. Start the data transfer at the PC.

Send data:

The data record completed with values can be transferred to the PC programme using this function (procedure identical to „**Load data**“).

Format:

This function is normally only needed by the initial adjustment of the instrument by the manufacturer (preparation of internal memory to data receipt). **Caution: All recorded values will get lost!**

10. Maintenance Tips

To secure the accuracy of your measuring instrument we recommend the annual check by an authorized ecom partner. In the case of strong demand (e.g. permanent several hours of measurement per day, rough conditions etc.) shorter intervals between checks should be selected - please contact your ecom partner. All ecom partners are listed under www.rbr.de. Do not use other sensor than supposed by our factory and be aware that service done by service stations not authorised by rbr will lead to expiration of any warranty.


The following tips for the daily care of accessible parts and components should be helpful:

Change fine dust filter:

Release the upper cap. Release the fine dust filter and check its state. It should be replaced once the soiling degree in the gas flow area shows a grey colour (ca. number 3 on soot comparison scale).

Condensate trap

Fine dust filter

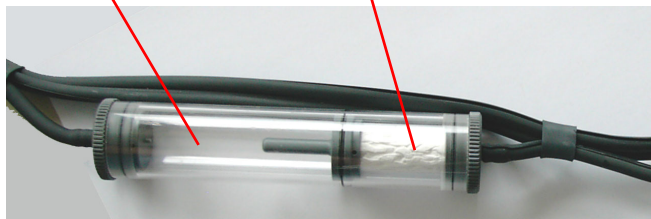

Condensate trap without monitoring



Make sure that condensate never enters the instrument (otherwise sensors will get defective)!

Empty condensate trap (condensate trap basis version):

The condensate collects the humidity of the sampled gas. Check regularly how much liquid has been gathered. Empty the trap in time and avoid humidity to enter the instrument. Release the lower cap to empty the trap. Pour out the condensate. Reassemble the trap.

Sensors

Each time the instrument is switched on the sensors are calibrated with fresh air. The instrument permanently monitors the condition of the sensors. New sensors wear out from use in time due to reaction (O₂-sensor) and due to soiled gases respectively gases in concentrations beyond the nominal range (toxic sensors). The output values of the sensors are (see menu "**Control**"):

O ₂	approx. 1500 mV
CO	0 mV (+/- 50)

If an error message is displayed during calibration cycle and does not disappear after repeated calibrations the instrument must be send to a service centre. The O₂ sensor should show > 200 mV, otherwise it should be changed.

The CO-sensor is protected by the internal program for overload. In case the limit of 2000 ppm is exceeded the gas pump is switched off.

Power supply

The battery ensures a main power independent operation. The battery is automatically charged when the instrument is connected to the main power supply. (Please do not interrupt the charging shortly since the charging circuitry could operate faulty.) The recharge of the battery should be done in any case if the voltage display (menu "**Control**") is less than 5.8 V (Instrument will stop working at 5.5 V).

Sampling probe and hose

Depending on the frequency of use the probe and the hose must be cleaned regularly, thus in order to prevent particles from lodging and early ware due to corrosion. The hose can be cleaned after all connections on the instrument and the probe itself have been switched off (use warm water and then blow out to dry).

Replace paper roll

Press slightly on the paper roll drawer to release the lock. Pull out the paper drawer and eject – if needed – the residual paper from the printer (“**Adjustments**”/“**Paper feed**”/“<Enter>”). Take out the paper shaft and put a new printer roll on the shaft. Re-position the printer shaft in the fixation. Insert the paper roll end through the slot. Transport the paper (approx. 10 cm) through the printer (“**Adjustments**”/“**Paper feed**”/“<Enter>”). Push the drawer back to the shaft. Push carefully the paper drawer until it locks.

11. Technical Data

Parameter	Range	Measurement principles
O ₂	0 ... 21 vol-%	electrochemical
CO (without H ₂)	0 ... 2000 ppm	electrochemical
CO ₂	0 ... CO ₂ max.	calculated
T-G	0 ... 500 °C	NiCr/Ni
T-R	0 ... 100 °C	semiconductor
Pressure	0 ... +/- 70 hPa	DMS-bridge
Efficiency	0 ... 120 %	calculated
Losses	0 ... 99,9 %	calculated
Lambda	1 ... ∞	calculated
CO-undiluted (reference-O ₂ ; adjustable)		calculated
Dew point of combustion gases		calculated
Power Supply	230 V / 50 Hz~;	
Battery	6 V / 3,8 Ah	
Display:	graphic display, backlit	
Size	(W x H x D) 350 mm x 200 mm x 135 mm	
Weight	approx. 4 kg (complete with sampling system)	

Subject to technical changes
V1.9 / 07.2011

rbr Messtechnik GmbH

Am Großen Teich 2

D-58640 Iserlohn

Telefon: 02371 - 945-5

Telefax: 02371 - 40305

Internet: <http://www.rbr.de>

eMail: info@rbr.de

12. FAQ

Where do I find important instrument information?

In the menu „Control“ all important instrument informations are shown (e.g. accu voltage, sensor values, unit number, next service date, operation hours etc.). With the arrow keys stands you can switch to the second page.

How long is the life span of the sensors?

The life span depends on the operating hours and the instrument equipment. The life span of the toxic sensors (CO, NO, SO₂, NO₂) is affected by high gas concentrations and a not sufficient purging. The life span for these sensors amounts to on the average between 4 and 6 years. The life span of the O₂ sensor is independent of the operating hours and amounts to approx. 2 years.

Which sensors can I exchange?

Please contact the next authorised service centre for changing sensors.

The instrument shows the error message „O₂ sensor 0 mV“!

The sensor must be renewed.

The instrument shows the message „Check required“!

This message appears automatically every 12 months or after 250 operating hours. Note: This is a recommendation to let check the instrument. The instrument is however still ready for use.

The instrument shows the error message „T-Gas“ oder „T-Air“!

Possible reasons could be:

- Cable is broken (at the plug)
- T-Air sensor is broken
- Thermocouple is broken
- Cable is defective

Note: The error messages can be ignored at the CL by pressing „Enter“. Calculations that depends on these temperatures are not implemented.

The instrument shows wrong or inaccurately CO₂ values!

Possible reasons could be:

- O₂ is defective (CO₂ values are calculated from the O₂ values)
- Pump is not working correctly
- Leakage in the gas way
- condensate trap / gas cooler is clogged

My instrument cannot be switched on!

- Please check the mains cable
- Please check the fuse
- Please check mains connection (Plug socket switched on?)
- Please load the accumulator min. 8 hours (Accumulator could be over-discharged)

My instrument does not print!

Please check whether the printer paper is correctly inserted. The thermal printer writes only on the thermally sensitive side. Please use always the correct paper for the printer, you will prevent defects at the printer. Please make sure that the printer is clean (no chads in the drive).

Can I change the printout?

You can change the printout (Menu: "Adjustments").

Hint: If you have several instruments of the same type, you can locate an error by exchanging the accessories (probe, hose, temperature sensor etc.).

If further questions or problems should arise, please contact the next authorised service centre.